



THE UMBRELLA PLUS

#UP-62




Close pocket flaps for use as umbrella.

Push up to invert for putting & chipping feature. Open pockets.

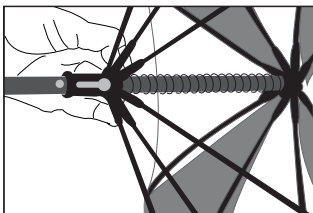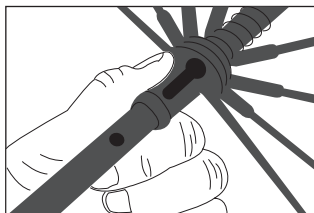

Push runner up and past hole, then pull back to lock in place.

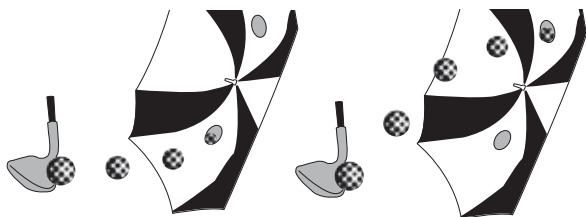

Putt into lower pocket, chip into both.



Use the small loops & Golf tees to anchor umbrella in ground.